


# REMOTE KEYBOARD


## KX5 REMOTE KEYBOARD

ステージ狭しとエキサイティングアクト。KX5はギターウエイトの3.7kg。全MIDI対応キーボードをリモートコントロール。

¥69,800 **NEW**

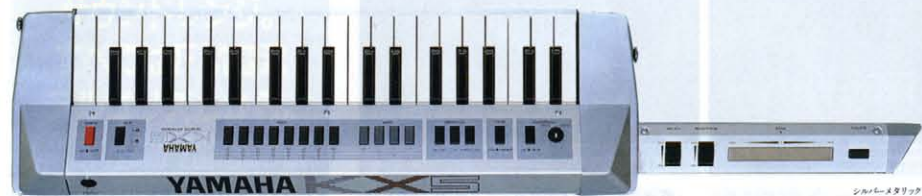

シルバーメタリック

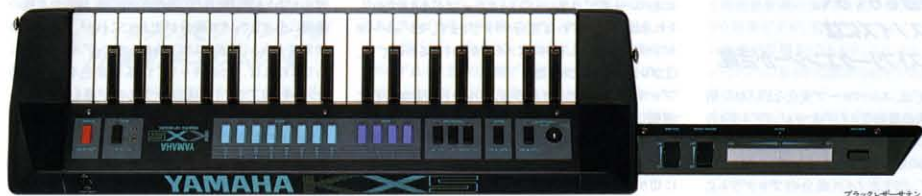

ブラックレーザン

MIDIは、リアルタイムプレイもホットにします。MIDIリモートキーボードKX5は、3.7kg=ジャストギターウエイト。充実のコントローラー群は、KX1ゆずり。DX本体のメモリーバンクに対応する4バンク×8ボイス=32のボイスセクターをはじめ、ボリュームホイール、モジュレーションホイール、ホルタメントノブ、そしてギタリストの専売特許をうばう、痛快なリボンタイピッチペンダーなど、プレイアビリティをリミットまで追求しました。ホーンプレイヤーが顔色を失う、ブレスコントローラー(別売)も接続可能です。しかもDX1・DX7とのコンビなら、キーベロシティ・センシビリティ(イニシャルタッチ)やアフタータッチも自由自在。ナチュラルな強弱表現から、FM音源アルゴリズム



DX7 MIDI端子  
KX5 MIDI端子  
KX: MIDI OUT→MIDI INと接続、MIDI THRU→MIDI INとつないで、複数のDXを制御することもできます。また、RXを制御することも可能です。

境地をお楽しみください。送信チャンネル1/2が選べる、MIDIチャンネルセクターの搭載により、DX/RXを瞬時に切り換えての演奏もOK。キートランスポーズ機能により音域は5オクターブ。KX5を持って、キーボードプレイヤーは「マスター・オブ・セレモニー」です。シルバーマタリックとブラックレーザンサテンの、2カラーを用意しました。



LC-KX5 ¥13,000  
KX5用セリードケース

## KX1 REMOTE KEYBOARD

キーボードプレイヤーよ、スツールから立ち上がれ。DXのマルチプルな機能に完全対応するプロフェッショナルリモートキーボード。

¥200,000



ホワイト



レッド

プロフェッショナルプレイヤーに熱烈に歓迎された、44鍵MIDIリモートキーボード、KX1。全ステレオエリアをキーボードプレイヤーに開放した、いわば移動性DXです。4バンク×8ボイス=32のボイスセクターをはじめ、ボリューム

ムホイール、ホルタメントホイール、リボンタイピッチペンダーなど、コントローラーはDXのリアルタイムコントロールに完全対応。鍵盤もタッチ機能に対応しており、DX1やDX7のキーベロシティ(イニシャルタッチ)、アフタータッチ

を駆使したプレイが数々のライブパフォーマンスを飾っています。5オクターブ以上をカバーする、トランスポーズ機能やブレスコントローラー(別売)端子も装備しました。鮮やかなレッド、スタイリッシュなホワイトの2カラーを用意。

# SPECIFICATIONS

	DX 1	DX 7	DX 9
鍵盤	73 keys E <sub>1</sub> -E <sub>8</sub> , wood key, TOUCH CONTROL, KEY VELOCITY, AFTER TOUCH, KEY INDIVIDUAL, AFTER TOUCH	61 keys C <sub>1</sub> -C <sub>8</sub> , TOUCH CONTROL, KEY VELOCITY, AFTER TOUCH	61 keys C <sub>1</sub> -C <sub>8</sub>
音源	FM TONE GENERATOR (6 OPERATOR, A-B, 32 ALGORITHM) DUAL: 16 SINGLE, 32 SPLIT, 16+16 (polyphonic) DUAL: 1 SINGLE, 1 SPLIT 1+1 (monophonic)	FM TONE GENERATOR (6 OPERATOR, 32 ALGORITHM) 16 (polyphonic) 1 (monophonic)	FM TONE GENERATOR (4 OPERATOR, 8 ALGORITHM) 16 (polyphonic) 1 (monophonic)
同時発音数	4 BANK×8 VOICE×A-B (voice memory)	32 VOICE (voice memory)	20 VOICE (voice memory)
内部メモリー	8 BANK×8 PERFORMANCE (performance memory)	32 VOICE×2 SIDE×1×2	32 VOICE
外部ROMメモリー	32 VOICE×2 SIDE×A-B×1×2, 64 PERFORMANCE		
外部RAMメモリー	32 VOICE×64 PERFORMANCE		
エディットパラメーター	ALGORITHM: ALGORITHM, FEEDBACK, OPERATOR OSCILLATOR: MODE, DETUNE, COARSE, FINE, ENVELOPE GENERATOR: EG (R1-R4, L1-L4), PITCH EG (R1-R4, L1-L4), KEYBOARD SCALING, LEVEL, SCALING (LEFT DEPTH, LEFT CURVE, BREAK POINT, RIGHT CURVE, RIGHT DEPTH, RATE SCALING, SENSITIVITY, KEY VELOCITY, AMPL, MODULATION, OPERATOR OUTPUT LEVEL, LFO WAVE, SPEED, DELAY, PM, PMS, AMD, KEY SYNC, OTHER, OSCILLATOR KEY SYNC, TRANSPOSE, VOICE NAME	OPERATOR ON-OFF, EG COPY (1-6), ALGORITHM, FEEDBACK, LFO (WAVE, SPEED, DELAY, PM, AMD, SYNC), MOD SENSITIVITY (PITCH, AMPLITUDE), OSCILLATOR (MODE, SYNC, FREQUENCY COARSE, FREQ. FINE, DETUNE), EG (RATE, LEVEL), KEYBOARD LEVEL SCALING (BREAK POINT, CURVE, DEPTH), KEYBOARD RATE SCALING, OPERATOR OUTPUT LEVEL, KEY VELOCITY (SENSITIVITY), PITCH EG (RATE, LEVEL) KEY TRANSPOSE, VOICE NAME	OPERATOR ON-OFF, EG COPY (1-4), ALGORITHM/FEEDBACK, LFO (WAVE, SPEED, DELAY, PM, AMD), MOD SENS. (PITCH/AMPL), OPERATOR SELECT, OSCILLATOR (FREQUENCY COARSE, FREQ. FINE, DETUNE, SYNC), EG (RATE, LEVEL) KEYBOARD SCALING (RATE, LEVEL), OPERATOR OUTPUT LEVEL, KEY TRANSPOSE
ファンクションパラメーター	MASTER TUNE: F1: MASTER TUNE, PERFORMANCE MEMORY PARAMETER FUNCTION CONTROL, F1: DUAL MODE DETUNE: F2: POLY/MONO, SOURCE SELECT, F3: PITCH BEND (RANGE, STEP), F4: PORTAMENTO (PORTAMENTO/GLISSANDO, RETAIN/FOLLOW, PEDAL ASSIGN, TIME), F5: OUTPUT LEVEL ATTENUATE, PROG. OUT ASSIGN, SUSTAIN PEDAL ASSIGN, F6: MOD. WHEEL (SENSITIVITY, ASSIGN, FOOT CONT. SENSITIVITY, ASSIGN), F7: BIRTH CONT. (SENSITIVITY, ASSIGN), AFTER TOUCH (SENSITIVITY, ASSIGN), F8: SPLIT POINT, KEY SHIFT, PERFORMANCE NAME, PERFORMANCE MEMORY PARAMETER KEY INDIVIDUAL, AFTER TOUCH F9: TOTAL SENSITIVITY, DECAY RATE, RELEASE RATE, F10: OP 1 DEPTH, OP 2 DEPTH, OP 3 DEPTH, F11: OP 4 DEPTH, OP 5 DEPTH, OP 6 DEPTH, MEMORY MANAGEMENT: F12: COPY OF DATA (ENVELOPE DATA, OSCILLATOR DATA), SAVE TEMP OPERATOR, INITIALIZE MEMORY, INITIALIZE VOICE, INITIALIZE PERFORMANCE, RECALL EDIT BUFF, F13: SAVE TO CARTRIDGE (ALL VOICE A, ALL VOICE B, ALL PERFORMANCE), LOAD FROM CARTRIDGE (ALL VOICE A, ALL VOICE B, ALL PERFORMANCE), CHANGE CART FORMAT, F14: PROTECT MEMORY WRITE, CLEAR ALL MEMORY, CHECK BATTERY, MIDI INFORMATION CONTROL: F15: ON/OFF, SET STATUS (BASIC EVENT DATA OUTPUT, OTHER EVENT DATA OUTPUT, SYSTEM EXCLU. COMMUNICATION, OMNI MODE, PROGRAM CHANGE MODE), TRANSMIT DATA (DUMP ALL VOICE A, DUMP ALL VOICE B, DUMP ALL PERFORMANCE), F16: RESET SEQUENCE	MASTER TUNE ADJ., POLY/MONO, PITCH BEND RANGE (RANGE, STEP), PORTAMENTO (MODE, GLISSANDO, TIME) EDIT RECALL, VOICE INIT., CARTRIDGE FORM., BATTERY CHECK, CARTRIDGE (SAVE, LOAD), MODULATION WHEEL (RANGE, PITCH, AMPLITUDE, EG BIAS), BREATH CONTROL (RANGE, PITCH, AMPLITUDE, EG BIAS), EDIT RECALL, VOICE INIT., MEMORY PROTECT	MASTER TUNE ADJ., POLY/MONO, PITCH BEND RANGE, PORTAMENTO (MODE, TIME), CASSETTE (SAVE/VERIFY, LOAD, LOAD SINGLE, REMOVE), MODULATION WHEEL (RANGE, PITCH, AMPLITUDE, EG BIAS), BREATH CONTROL (RANGE, PITCH, AMPLITUDE, EG BIAS), EDIT RECALL, VOICE INIT., MEMORY PROTECT
コントローラー	VOLUME: VOLUME SLIDER, BALANCE SLIDER, PHONES VOLUME, EFFECT CONTROLLER, PORTAMENTO TIME SLIDER, PITCH BEND WHEEL, MODULATION WHEEL, DATA ENTRY: DATA ENTRY SLIDER, +/- SW, MEMORY&PARAMETER SELECT, EDIT PARAMETER (ALGORITHM, OPERATOR), VOICE MEMORY, PERFORMANCE MEMORY FUNCTION, CARTRIDGE A-B, KEY ASSIGN MODE, SINGLE, DUAL, SPLIT MODE SELECTOR, EDIT/COMPARE, FUNCTION, STORE, OTHER, OPERATOR SELECT, OPERATOR ON/OFF, DISPLAY SELECT (EG, PITCH EG)	VOLUME: VOLUME SLIDER, EFFECT CONTROLLER, PITCH BEND WHEEL, MODULATION WHEEL, DATA ENTRY: DATA ENTRY SLIDER, +/- SW, MEMORY&MODE SELECTOR, EDIT/COMPARE, OPERATOR SELECT, PLAY (MEMORY SELECT INTERNAL, MEMORY SELECT CARTRIDGE), FUNCTION, STORE, MEMORY PROTECT (INTERNAL, CARTRIDGE)	VOLUME: VOLUME SLIDER, EFFECT CONTROLLER, PITCH BEND WHEEL, MODULATION WHEEL, DATA ENTRY: DATA ENTRY SLIDER, +/- SW, MEMORY&MODE SELECTOR, EDIT/COMPARE, PLAY (MEMORY SELECT), FUNCTION, STORE
ディスプレイ	LED GRAPHIC DISPLAY: EDIT PARAMETER (ALGORITHM, OPERATOR), LC DISPLAY: EDIT PARAMETER (LFO etc.) FUNCTION PARAMETER	LC DISPLAY: EDIT PARAMETER/FUNCTION PARAMETER	LC DISPLAY: EDIT PARAMETER/FUNCTION PARAMETER
オーディオ端子	OUTPUT A-B-P: PHONE JACK, XLR TYPE balanced PHONES: STEREO PHONE JACK 5-8Ω	OUTPUT: PHONE JACK, PHONES: STEREO PHONE JACK	OUTPUT: PHONE JACK, PHONES: STEREO PHONE JACK
コントロール端子	CONTROL JACK: MODULATION, VOLUME, SUSTAIN ON/OFF, PORTAMENTO ON/OFF, INTERFACE: MIDI IN-OUT, THRU, CARTRIDGE INSERT A-B	CONTROL JACK: MODULATION, VOLUME, SUSTAIN ON/OFF, PORTAMENTO ON/OFF, INTERFACE: MIDI IN-OUT, THRU, CARTRIDGE INSERT	CONTROL JACK: VOLUME, SUSTAIN ON/OFF, PORTAMENTO ON/OFF, INTERFACE: MIDI IN-OUT, THRU, CASSETTE IN-OUT-REMOTE
寸法・重量	125.5W×22.5H×64.0Dcm=51kg	101.8W×10.2H×32.9Dcm=12.2kg	101.8W×10.2H×32.9Dcm=12.2kg
寸法・重量	100V-50/60Hz	100V-50/60Hz	100V-50/60Hz
定格消費電力	70W	30W	25W
標準装備品	foot switch FC-4×2, foot controller FC-3A×2, breath controller BC-1, music stand, power cable, ROM voice memory cartridge (32 VOICE×2 SIDE)×4, ROM performance memory cartridge (64 PERFORMANCE)	music stand, ROM voice memory cartridge (32 VOICE×2 SIDE)×2	music stand, VOICE DATA cassette tape (120 VOICE) cassette interface cable
別売アクセサリー	RAM cartridge RAM-1, case LC-1H, stand LG-200, MIDI cable MIDI-15/MIDI-03	RAM cartridge RAM-1, case LC-7H/LC-7S, stand LG-100/LG-30, foot controller FC-3A, breath controller BC-1, foot switch FC-4/FC-5, MIDI cable MIDI-15/MIDI-03	case LC-7H/LC-7S, stand LG-100/LG-30, foot controller FC-3A, breath controller BC-1, foot switch FC-4/FC-5, MIDI cable MIDI-15/MIDI-03
	<b>KX 1</b>		<b>KX 5</b>
鍵盤	44 keys		37 keys
ボイスセクター	32		32
コントロール	SUSTAIN SW, PORTAMENTO SW, PITCH BEND RIBBON CONTROLLER, MODULATION WHEEL, VOLUME WHEEL, PORTAMENTO WHEEL, MONO SW, TRANSPOSE (OCT DOWN, OCT UP), BANK(1-4), VOICE(1-8)		SUSTAIN SW, PITCH BEND RIBBON CONTROLLER, MODULATION WHEEL, VOLUME WHEEL, PORTAMENTO WHEEL, MODE SW, TRANSPOSE (OCT DOWN, OCT UP), BANK(1-4), VOICE(1-8), MIDI CH SELECTOR
オーディオ端子	DC IN, MIDI OUT		MIDI OUT
寸法・重量	124.9W×8.8H×23.1Dcm=5.7kg		91.4W×8H×19.1Dcm=3.7kg
標準装備品	strap, MIDI cable MIDI-15, 兼3 battery×6		MIDI cable MIDI-15, 兼3 battery×6
別売アクセサリー	case LC-KX1, battery pack BT-1, MIDI cable MIDI-03		case LC-KX5, MIDI cable MIDI-03